Programming a Preset Feed

Use the instructions below to program or delete a preset feed.

PRESET FEEDS
Quick Reference Sheet

PROGRAMMING A FEED

1

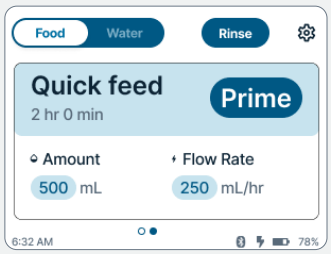

Unlock the pump and swipe to the right of the Quick feed screen.

2

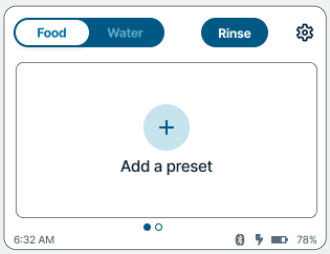

Tap the plus symbol to program a new preset feed.

3

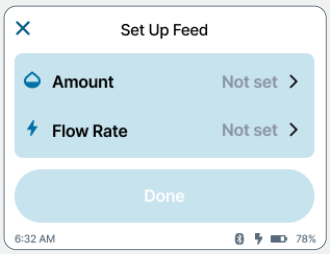

Tap Amount to customize the amount of nutrition or water.

4

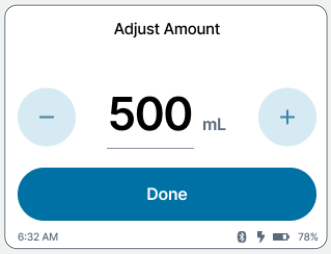

Tap the center number (500 by default) or use the - and + icons to enter the desired amount and tap Done when finished.

5

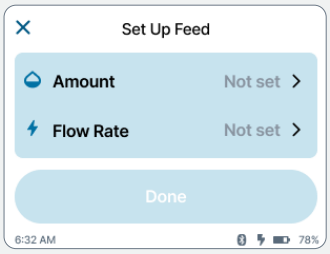

Tap Flow Rate to customize the rate of delivery.

6

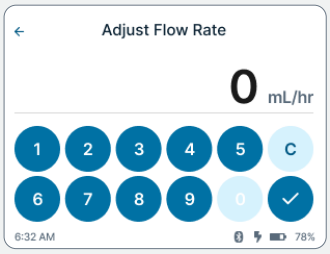

Tap the center number (250 by default) or use the - and + icons to enter the desired amount and tap ✓ when finished.

7

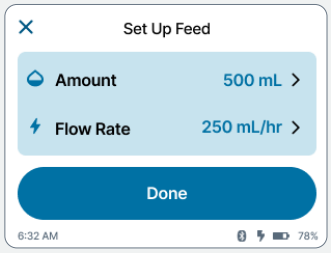

Tap done when finished.

8

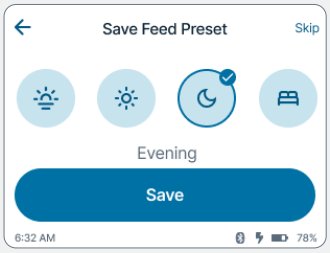

Select an icon (morning, afternoon, evening, or overnight) to help differentiate between multiple preset programs and tap Save.

Note: *If no icon is selected, it will display as an additional "Quick feed" card.*

9

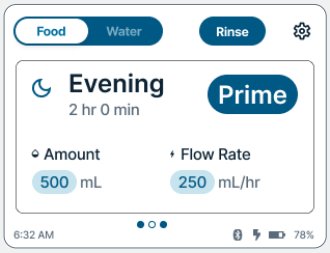

The new programmed preset will be visible by scrolling to the right on the home screen.

Programming a Preset Feed

Use the instructions below to program or delete a preset feed.

PRESET FEEDS
Quick Reference Sheet

DELETING A PRESET FEED

1

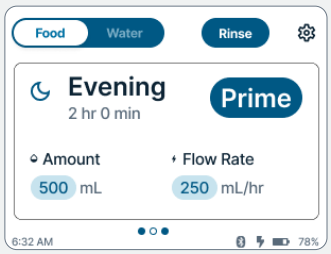

Tap and hold the Preset Feed card you want to delete for 5 seconds.

2

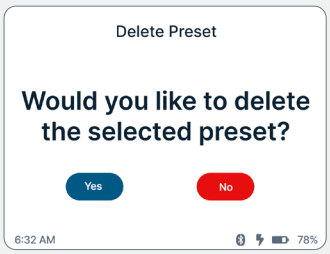

Tap “Yes” to remove the preset or “No” to cancel.

RX Only. The Luminoah Flow Enteral Nutrition System is intended for the delivery of supplemental nutrition and fluids to the gastrointestinal system including nutritional formula, fluids, and/or water. It can be used by an adult layperson, caregiver, or healthcare professional for both adult and pediatric patients, ages 2 years and older. This system is not intended for use with neonates. The Luminoah Flow System is intended for hospital and acute care settings as well as for home health use.

© 2026 Luminoah, Inc. All rights reserved. Luminoah, the Luminoah logo and Luminoah Flow are trademarks of Luminoah, Inc. MKT-00004

LUMINOAH